



Figure 1: FLEX Multibus RS422 module

Jumper	pos. 1-2	pos. 2-3
JP1	TXEN_dsPIC	TXEN +5V
JP2	LOOPBACK_0	-
JP3	TXEN_dsPIC	TXEN GND
JP4	TXEN_dsPIC	TXEN +5V
JP5	LOOPBACK_1	-
JP6	TXEN_dsPIC	TXEN GND
JP7	RX_0	RX_1

Note: Default jumper settings are indicated with grey background

CON 1	
Pin 1	+5V
Pin 2	TX
Pin 3	TXEN
Pin 4	RX
Pin 5	-
Pin 6	GND

CON 2	
Pin 1	RS485+_0
Pin 2	RS485-_0
Pin 3	RS485+_1
Pin 4	RS485-_1
Pin 5	GND